



Ehang GHOSTDRONE Aerial Plus 2.0 Gimbal Replacement

Replace your gimbal to continue taking great photos with your Ehang GHOSTDRONE Aerial Plus 2.0.

Written By: Eleni



INTRODUCTION

Are you having trouble taking photos with your Ehang GHOSTDRONE Aerial Plus 2.0? Follow these steps to replace the gimbal.



TOOLS:

- [2 Hex](#) (1)
-

Step 1 — Gimbal



- Turn the drone on its back and identify the gimbal.

Step 2



- Identify the screws on the gimbal.
- Using the Hex 2.0 on the Magnetized Driver Handle unscrew the screws counter clockwise and remove.
- Pull the gimbal upwards and off the base of the drone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 09:47:29 AM.